

Wiper Motor Cover Installation Guide

Tools needed: 10mm socket wrench w. small extension.

1. Unplug the wiring connector.
2. Remove the 2 bolts from the wiper motor opposite of the round section.

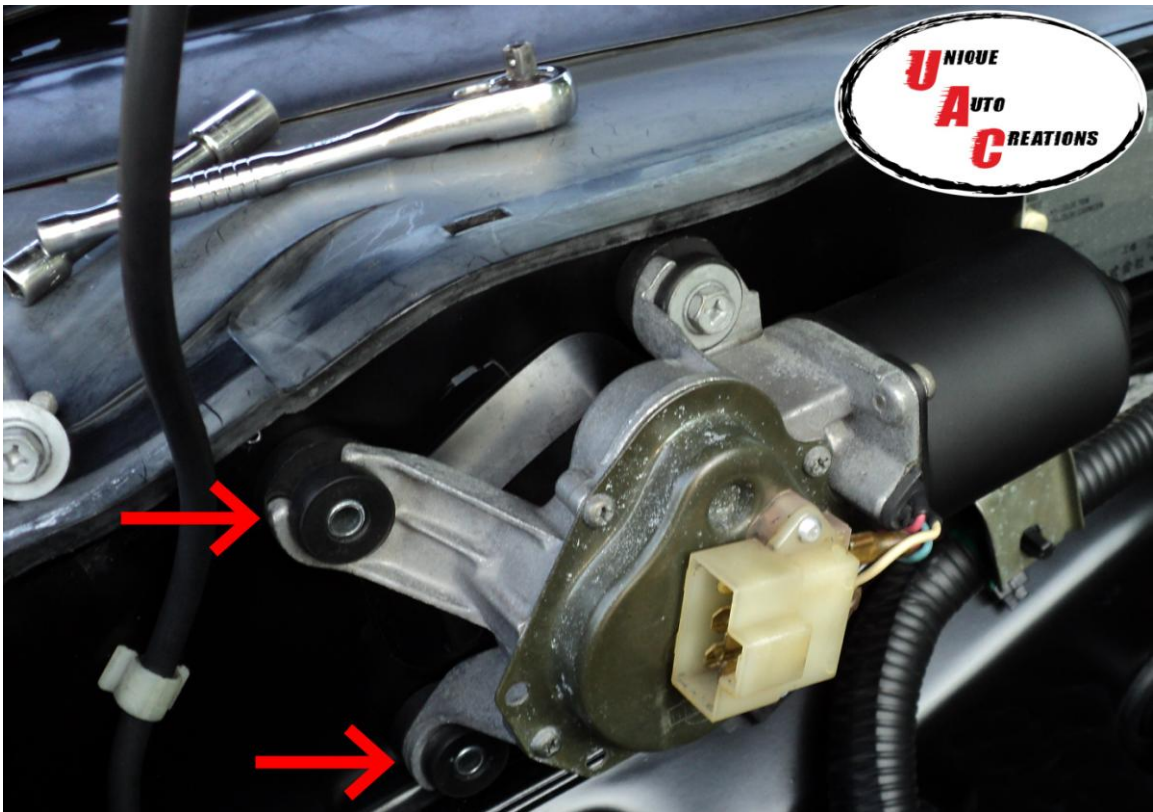


Image is for reference only. Actual wiper motor may differ from picture.

3. Install the UAC wiper motor cover over the wiper motor.
4. Plug the connector back in and enjoy your new look!