

## S14 Wiper Motor Cover Installation Guide

Tools needed: 10mm socket wrench w. small extension.

1. Unplug the wiring connector.
2. Remove the 2 bolts from the wiper motor opposite of the round section.

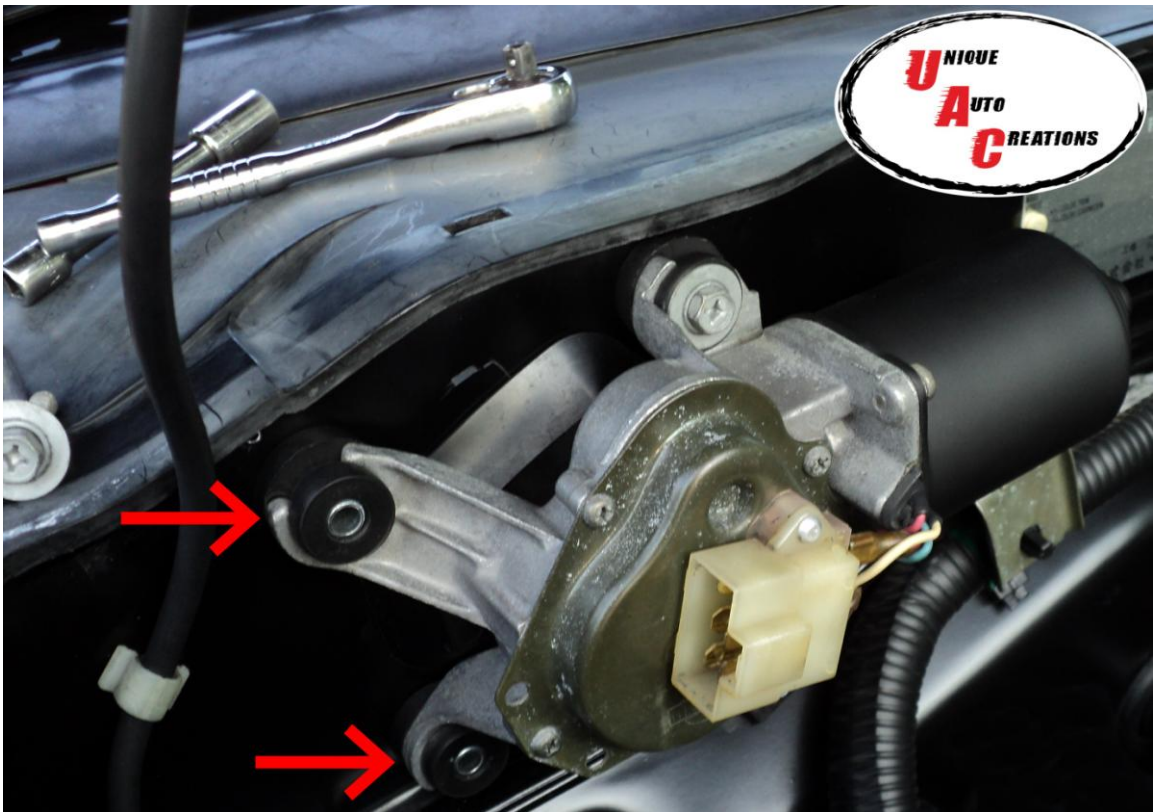


Image is for reference only. Actual wiper motor may differ from picture.

3. Install the UAC wiper motor cover over the wiper motor.
4. Using the supplied washers, Place one on each of the bolts you removed and reinstall the bolts. Do NOT over tighten.
5. Plug the connector back in and enjoy your new look!